

Removal and Installation


INFOID:0000000003463287

REMOVAL

HORN

< SERVICE INFORMATION >

- Remove front grille. Refer to El-10, "Removal and Installation".
- 2. Disconnect horn connector.
- 3. Remove horn mounting nut (A) and remove horn (1) from vehi-

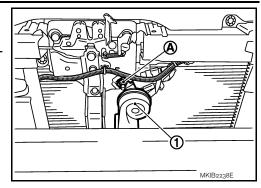

INSTALLATION

Installation is the reverse order of removal.

• Tighten horn bolt to specified torque.

Horn mounting bolt



: 17.1 N·m (1.74 kg-m, 12.6 in-lb)